


NEON STRIP MANUAL

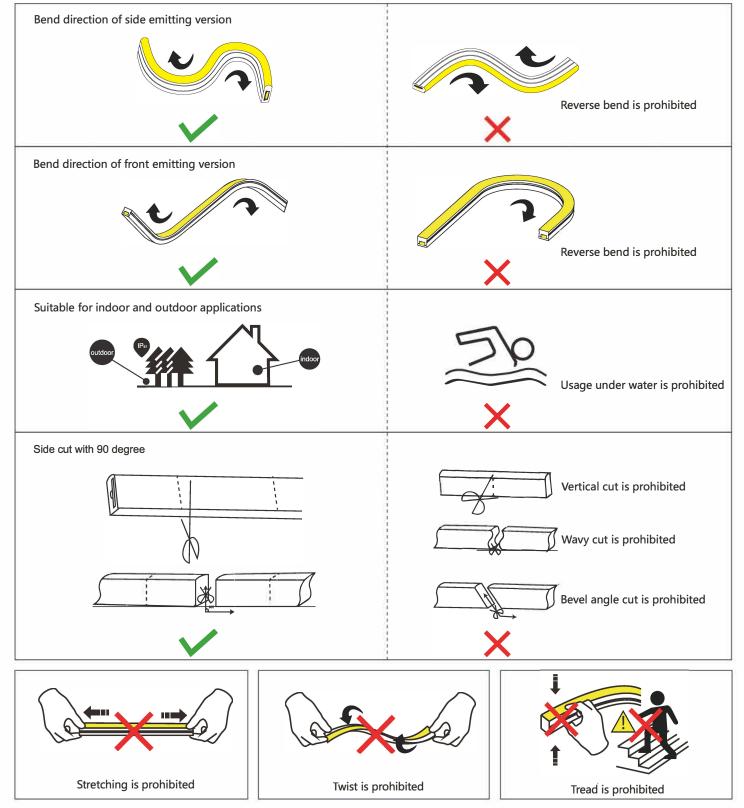

Note:




∭ Interforts FCC CE RoHS ⊠ ≚

(888) 998-LEDS (5337) | i-luminosity.com | info@i-luminosity.com




NEON STRIP MANUAL


• Fix by clips

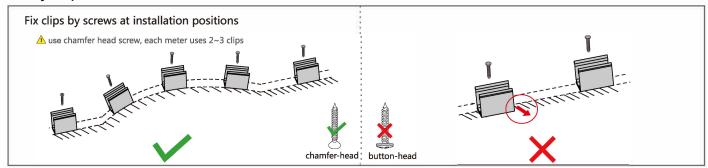

• Profile or slot installation

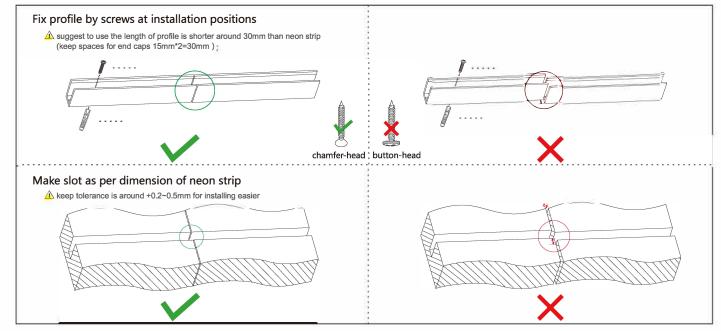

• Install or uninstall of neon strip

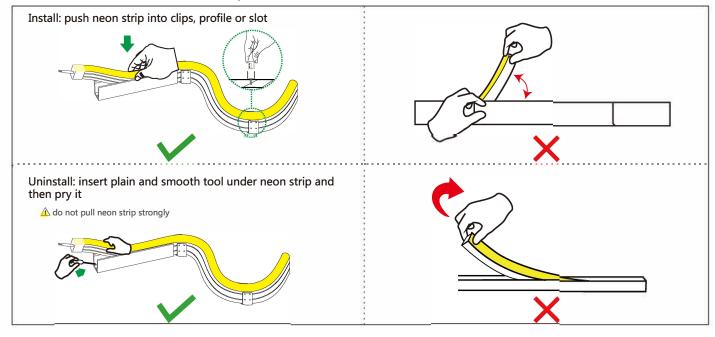


(888) 998-LEDS (5337) | i-luminosity.com | info@i-luminosity.com




NEON STRIP MANUAL

Wiring diagram

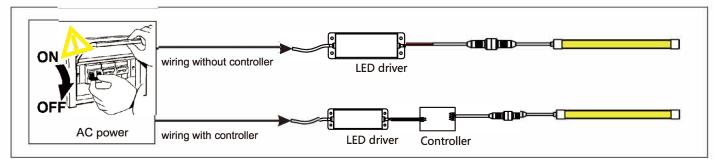

Cut + wire solder + seal end caps by silicone glue

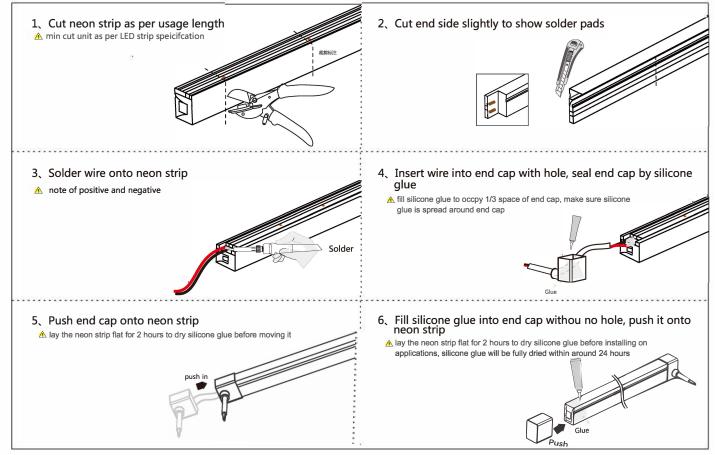

Note:

- 1. Neon strip could be cut only at the positions with symbol of cutting line.
- 2. Be aware of positive and negative for wiring, check voltage of LED driver and neon strip, or product might be damaged by mistake.
- 3. Lit on it for each connection unit when doing series connection of neon strips to check if there is any wrong wiring of positive and negative.
- 4、 Bend neon strip as per instruction (front bend and side bend) within curve radius more than 30/60mm to protect product.
- 5. Be aware of electric shock, do not touch AC power when LED driver is connected to AC power.

Warranty:

- 1、Warranty for 3 years at normal usage condition without artificial damage.
- 2、Warranty would be invalid if there is any wrong handling as below:
 - (1) did not use product in accordance to this manual to damage product.
 - (2) disassemble product by wrong way to damage product.
 - (3) surface of product is severe damaged or deformed.



(888) 998-LEDS (5337) | i-luminosity.com | info@i-luminosity.com