
Wall Light Series
LED Wall Sconce Light


WARNING

PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION


- To prevent personal injury or product damage only licensed electricians should install.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- Disconnect product and allow cooling prior to servicing.
- Any alteration or modification and/or electrical shock of this product is forbidden as it may cause personal injury, death propertydamage and/or product malfunction.
- This luminaire is designed to operate in ambient temperatures ranging from -40℃ to 50℃ （-40℉ to 122℉）

Mounting Bracket

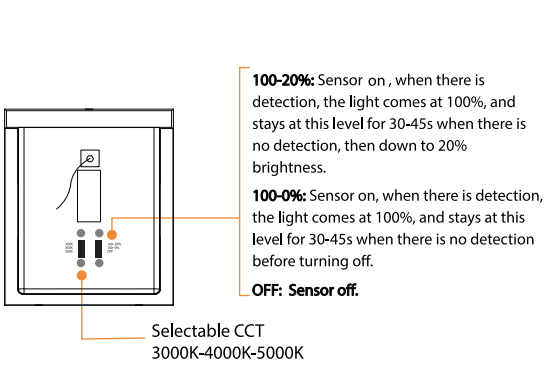

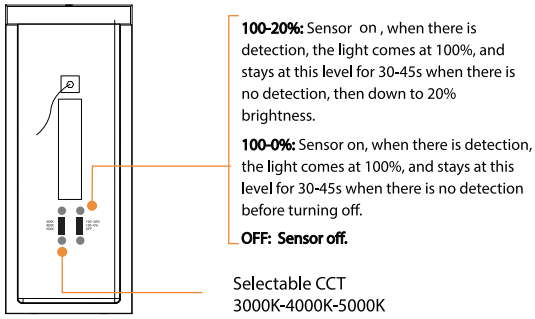


Dimensions

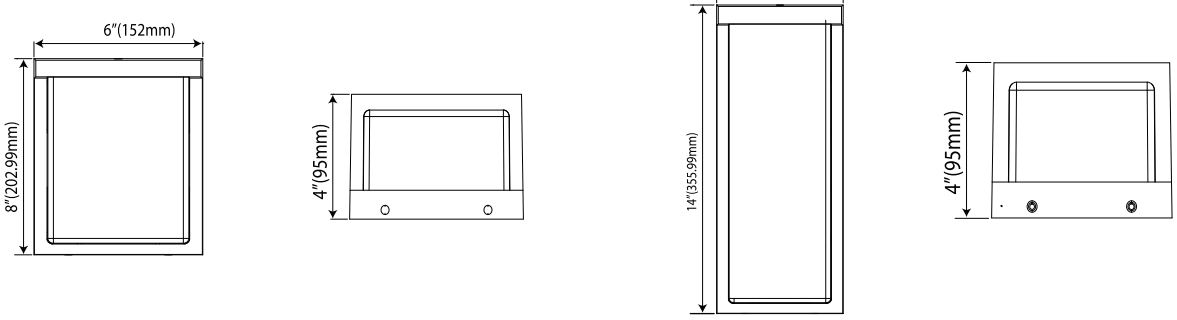


Installation Method A


Step 1: Remove the 3 screws on the PC frame, one on the top and the other two at the bottom, then take out the PC frame.

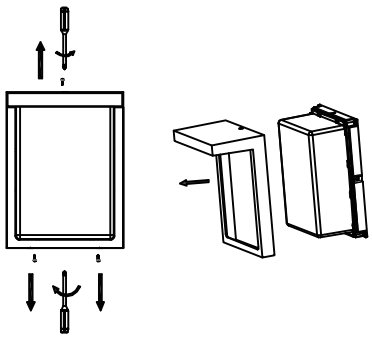


Step 2: Remove the screws on both sides of the light, and take out the installation bracket.

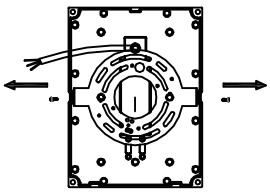


Step 3: Screw the bracket onto the wall.

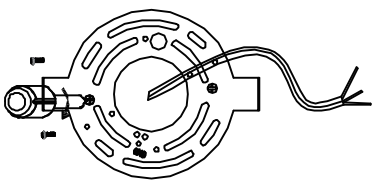


Step 4: Connect the light cable to the power input cable.

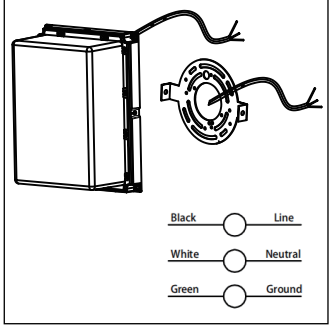

Step 5: Screw and fasten the light on the bracket with screws on both sides of the lights.

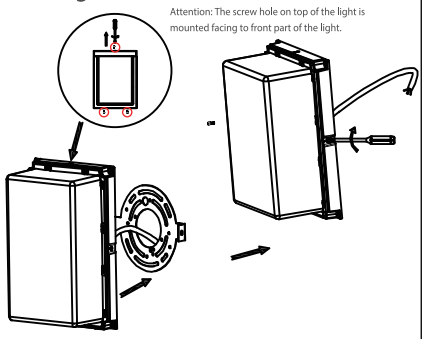


Step 6: Screw and fasten the PC frame back to the light with one screw on the top and two screws at the bottom.

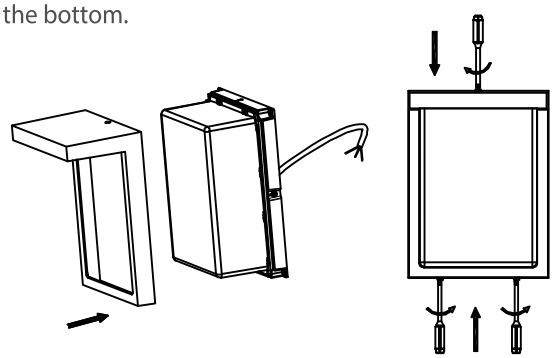


Installation Method B


Step 1: Remove the 3 screws on the PC frame, one on the top and the other two at the bottom, then take out the PC frame.

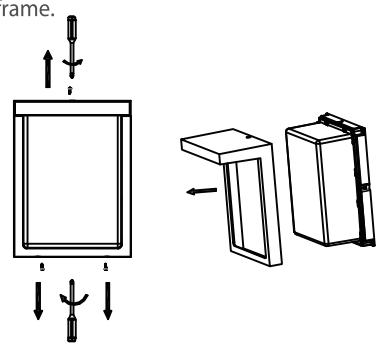


Step 2: Connect the light cable to the power input cable.

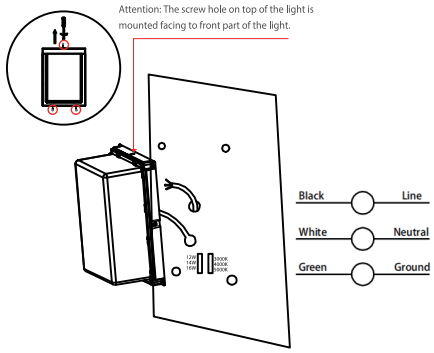

Step 3: Screw and fasten the light to the wall with 4 KA5X12 screws on the 4 corners of the light.

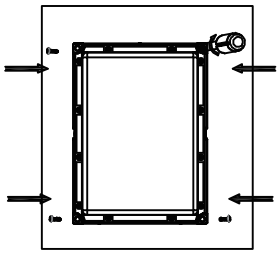

Step 4: Screw and fasten the PC frame back to the light with one screw on the top and two screws at the bottom.

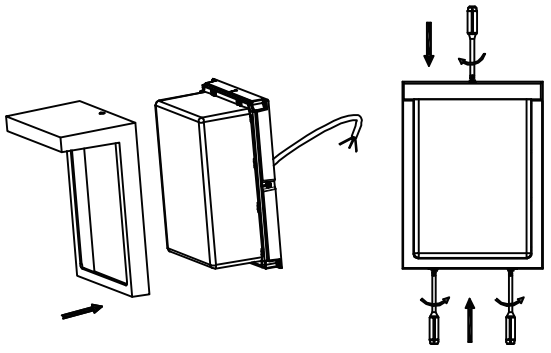

MODEL	PACKING SIZE	PCS/CTN	N.W.	G.W.	20GP	40HQ
MT-WS16AD-WY3C-864-01ND	L515*W320*H225mm	10	6kg	6.9kg	8200	18200
MT-WS22AD-WY3C-1454-02ND	L515*W285*H375mm	10	7.6kg	8.3kg	5500	12200